
RETT 11MM EXTREME HEAD STUD KIT



Me recommend reading our fitting instructions in full prior to beginning installation.

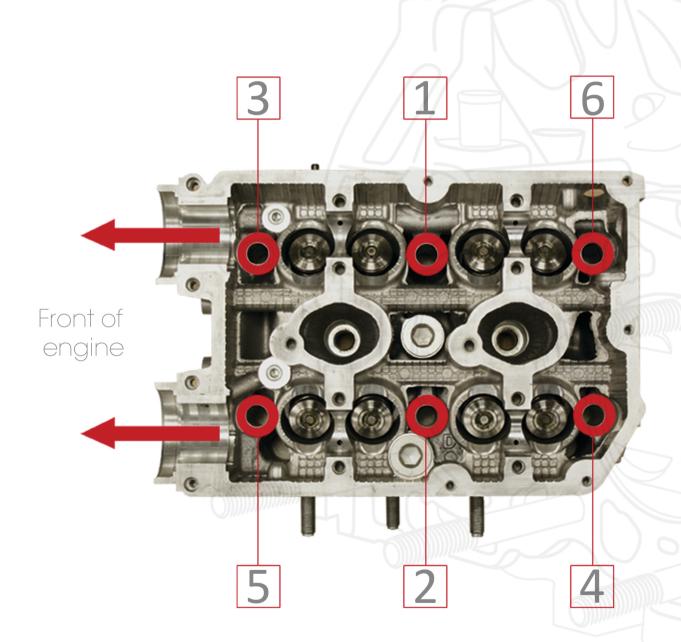

Follow the instructions below for torque settings and be sure to adhere to the diagram opposite, showing the correct tightening sequence.

Before beginning the below procedure ensure that the RCM assembly lube has been applied to all stud threads.

- In sequence tighten all to 22lb's/ft (29NM).
- In sequence tighten all to 511b's/ft (69NM).
- In sequence slacken all off by 180 degree's.
- In sequence re-torque to 15lb's/ft (20NM).
- In sequence re-torque to 30lb's/ft (40NM).
- In sequence re-torque to 60lb's/ft (80NM).
- In sequence re-torque to 90lb's/ft (120NM).

All I ask of my Performance parts is that they get me to the finish, and in first place......

